

Pedestrian Studies



Introduction

People walk for many reasons: to go to a neighbour's house, to run errands, for school, or to get to a business meeting. People also walk for recreation and health benefits or for the enjoyment of being outside. Some pedestrians must walk to transit or other destinations if they wish to travel independently. It is a public responsibility to provide a safe, secure, and comfortable system for all people who walk. In this lecture we will discuss about the pedestrian problems, pedestrian survey (data collection), characteristics, different level of services, and design principles of pedestrian facilities. There are many problems related to safety security of pedestrians.

Pedestrian Problems

Accidents Circumstances - Pedestrian accidents occurs in a variety of ways; the most common type involves pedestrian crossing or entering the street at or between intersections.

- ✚ Darting: It is used to indicate the sudden appearance of a pedestrian from behind a vehicle or other sight obstruction.
- ✚ Dashing: It refers to the running pedestrians.

Special Problems

- ✓ **Age**: Children under 15 years of age from the largest group of pedestrian victims and have the highest injury rate per population in their age group, the elderly have the highest fatality rate because of the lower probability of their recovery from injuries.
- ✓ **Intoxication and Drug effects**: Alcohol and drugs impair the behaviour of pedestrians to the extent that they may be a primary cause of accident.
- ✓ **Dusk and Darkness**: Special pedestrian safety problems arise during the hours of dusk and darkness, when it is most difficult for motorists to see pedestrians.

Definition of a Pedestrian

Any person afoot is the definition of Uniform Vehicle Code of pedestrian. However expand this definition to explicitly include people with disabilities, such as who use wheelchairs or other mobility devices. At the beginning and end of every motorist's trip, he or she is pedestrian.

The driver and/or passenger walks to the vehicle, which is parked, drives to a destination, parks the vehicle again, and walks to the final destination. In urban centers, pedestrian flows can be

significant, and they must be accommodated in planning and design of traffic facilities and controls. Pedestrian safety is also a major issue, as the pedestrian is at a visible disadvantage where potential pedestrian-vehicle conflict exist, such as at the intersections.

It is important to recognize the forces influencing the demand for provision of more and better pedestrian facilities. Undoubtedly one important factor has been the increased awareness of the environmental problems created by the rapid national and worldwide growth in vehicle travel, but of equal important has been the recognition by many people of need for physical fitness and the role that play in achieving this.

Factors affecting pedestrian demand

- ❖ **The nature of the local community**- Walking is more likely to occur in a community that has a high proportion of young people.
- ❖ **Car ownership** -The availability of the private car reduces the amount of walking, even for short journey.
- ❖ **Local land use activities**- Walking is primarily used for short distance trips. Consequently the distance between local origins and destinations (e.g. homes and school, homes and shops) is an important factor influencing the level of demand, particularly for the young and elderly.
- ❖ **Quality of provision**- If good quality pedestrian facilities are provided, then demand will tend to increase.
- ❖ **Safety and security**- It is important that pedestrians perceive the facilities to be safe and secure. For pedestrians this means freedom from conflict with motor vehicle, as well as a minimal threat from personal attack and the risk of tripping on uneven surfaces.

Pedestrian Term

- **Pedestrian speed** is the average pedestrian walking speed, generally expressed in units of meters per second.
- **Pedestrian flow rate** is the number of pedestrians passing a point per unit of time, expressed as pedestrians per 15 min or pedestrians per minute. Point refers to a line of sight across the width of a walkway perpendicular to the pedestrian path.
- **Pedestrian flow per unit of width** is the average flow of pedestrians per unit of effective walkway width, expressed as pedestrians per minute per meter (p/min/m). Pedestrian density is the average number of pedestrians per unit of area within a walkway or queuing area, expressed as pedestrians per square meter (p/m²).
- **Pedestrian space** is the average area provided for each pedestrian in a walkway or queuing area, expressed in terms of square meters per pedestrian. This is the inverse of density, and is often a more practical unit for analyzing pedestrian facilities.
- **Platoon refers** to a number of pedestrians walking together in a group, usually involuntarily, as a result of signal control and other factors.

Data collection

Before deciding on the appropriate extent and standard of pedestrian facilities, it is important to assess the potential demand. The possible methods of obtaining such estimates are manual count, video survey, and attitude survey described as follows.

Manual counts

Count the flow of pedestrian through a junction, across a road, or along a road section/footway manually using manual clicker and tally marking sheet. Manual counts need to satisfy the following conditions.

- **The time period**(s) in the day over which the counts are undertaken must coincide with the peak times of the activity of study.
- **The day(s) of the week and month(s) of the year** when observations are made must be representative of the demand. School holidays, early closing, and special events should be avoided since they can result in non-typical conditions.
- **The survey locations** need to be carefully selected in order to ensure that the total existing demand is observed.

Advantages of this manual counting are that these are simple to set up and carry out, and flexible to response observed changes in demand on site and disadvantages are that these are labour intensive also simple information can be achieved and not detailed information.

Video survey

Cameras are setup at the selected sites and video recording taken of the pedestrians during the selected observation periods. A suitable vantage point for the camera is important. Such survey produces a permanent record of pedestrian movement and their interaction with vehicles. In it the record of behaviour pattern is also obtained which helps in analyzing the crossing difficulties.

Attitude survey

Detailed questionnaire requires enabling complete information about pedestrian's origins and destination points, also can gather information on what new facilities, or improvements to existing facilities, need to be provided to divert trips to walking, or increase the current pedestrian activities.

Pedestrian Flow characteristic

In many ways pedestrian flow are similar to those used for vehicular flow because it can be described in terms of familiar variables such as speed, volume, rate of flow and density. Other measures related specifically to pedestrian flow include the ability to cross a pedestrian traffic stream, to walk in the reverse direction of a major pedestrian flow, to manoeuvre generally

without conflicts and changes in walking speed, and the delay experienced by pedestrians at signalized and unsignalized intersections. It is dissimilar to the vehicular flow in that pedestrian flow may be unidirectional, bidirectional, or multi-directional. Pedestrians do not always travel in clear “lanes” although they may do sometimes under heavy flow.

Pedestrian Speed-Density Relationships

The fundamental relationship between speed, density, and volume for pedestrian flow is analogous to vehicular flow. As volume and density increase, pedestrian speed declines. As density increases and pedestrian space decreases, the degree of mobility afforded to the individual pedestrian declines, as does the average speed of the pedestrian stream, it is shown in Fig.1.

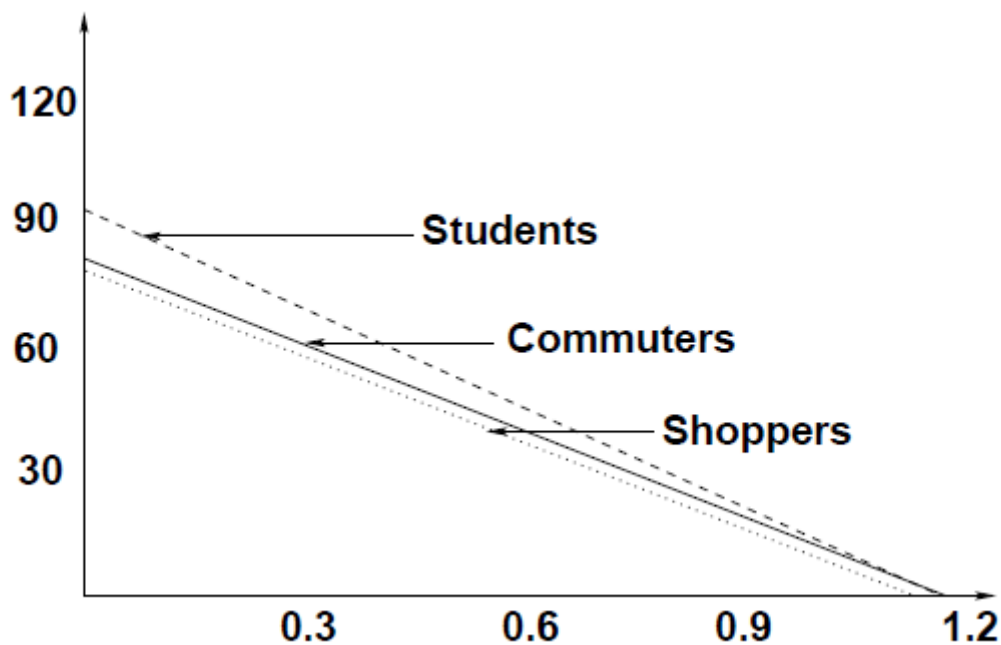


Figure 1 Relationship between pedestrian speed and density.

Flow-Density Relationships

The relationship among density, speed, and flow for pedestrians is similar to that for vehicular traffic streams, and is expressed in equation.

$$Q_{ped} = S_{ped} * D_{ped}$$

Where,

Q_{ped} = unit flow rate (p/min/m),
 S_{ped} = pedestrian speed (m/min), and
 D_{ped} = pedestrian density (p/ m^2).

Pedestrian density is an awkward variable in that it has fractional values in pedestrian per square meter. This relationship often expressed in terms of Space module (M) which is the inverse of pedestrian density. The inverse of density is more practical unit for analyzing pedestrian facilities, so expression becomes:

$$Q_{ed} = \frac{S_{ped}}{M}$$

Where,

M in (m^2 /ped).

The basic relationship between flow and space, recorded by several researchers, is illustrated in the Fig. 2. The conditions at maximum flow represent the capacity of the walkway facility. From Fig. 2, it is apparent that all observations of maximum unit flow fall within a narrow range of density, with the average space per pedestrian varying between 0.4 and 0.9 m^2 /p. Even the outer range of these observations indicates that maximum flow occurs at this density, although the actual flow in this study is considerably higher than in the others. As space is reduced to less than 0.4 m^2 /p, the flow rate declines precipitously. All movement effectively stops at the minimum space allocation of 0.2 to 0.3 m^2 /p.

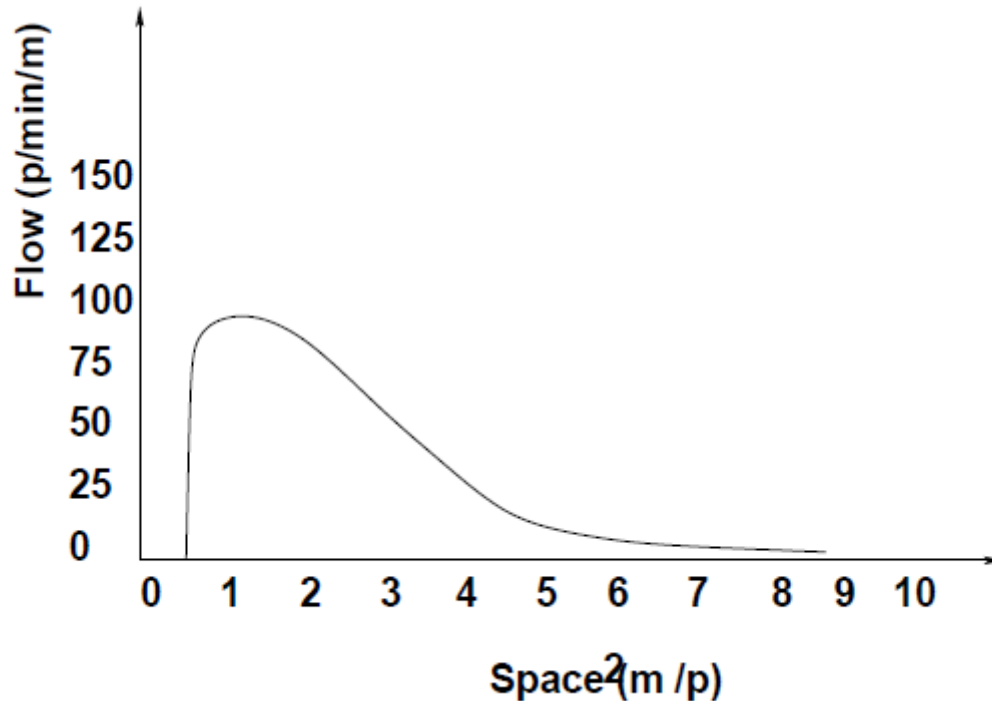


Figure 2: Relationship between pedestrian space & flow.

Speed-Flow Relationships

The following Fig. 3 illustrates the relationship between pedestrian speed and flow. These curves, similar to vehicle flow curves, show that when there are few pedestrians on a walkway (i.e., low flow levels), there is space available to choose higher walking speeds. As flow increases, speeds decline because of closer interactions among pedestrians. When a critical level of crowding occurs, movement becomes more difficult, and both flow and speed decline. The Fig. 4 confirms the relationships of walking speed and available space, and suggests some points of demarcation for developing LOS criteria. The outer range of observations indicates that at an average space of less than $1.5 \text{ m}^2/\text{p}$, even the slowest pedestrians cannot achieve their desired walking speeds. Faster pedestrians, who walk at speeds of up to 1.8 m/s , are not able to achieve that speed unless average space is $4.0 \text{ m}^2/\text{p}$ or more.

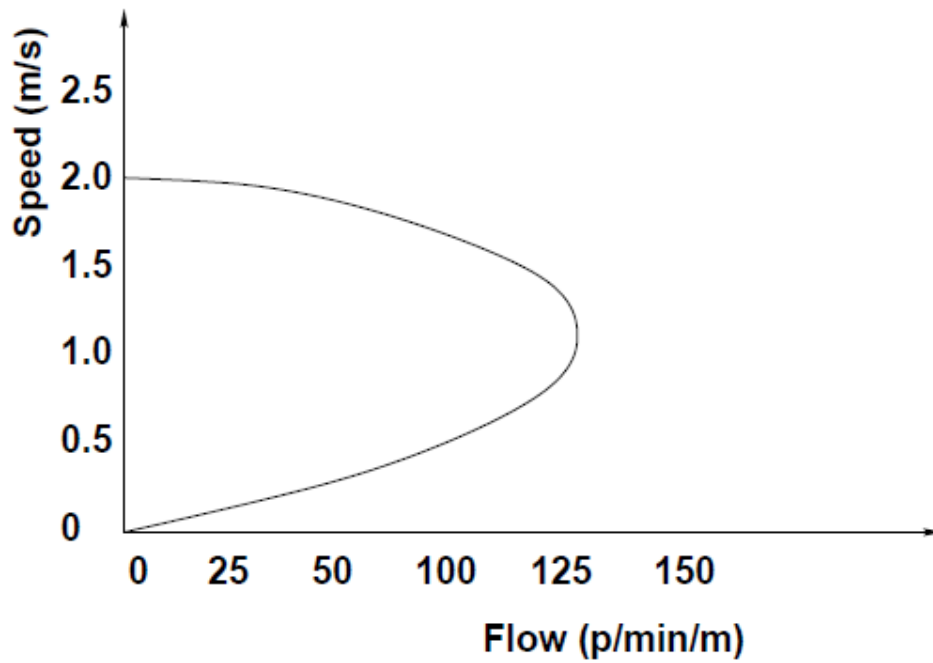


Figure 3: Relationships between Pedestrian Speed and Flow.

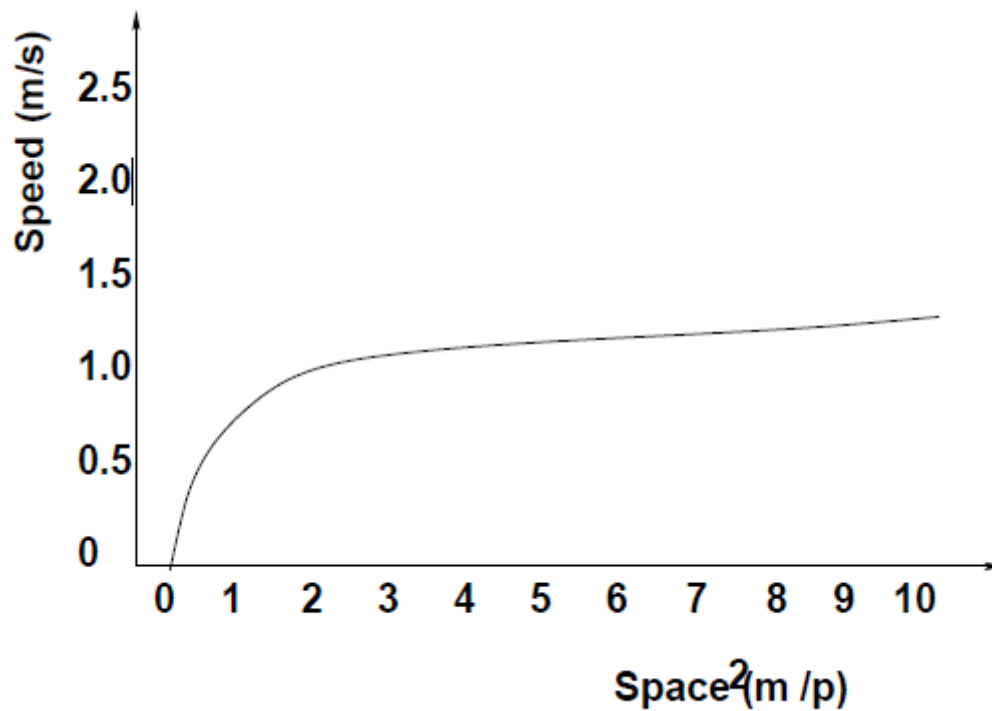


Figure 4: Relationships between Pedestrian Speed and Space.

Pedestrian Space Requirements

Pedestrian facility designers use body depth and shoulder breadth for minimum space standards, at least implicitly. A simplified body ellipse of 0.50 m * 0.60 m, with total area of 0.30 m² is used as the basic space for a single pedestrian, as shown in Fig. 5 this represents the practical minimum for standing pedestrians. In evaluating a pedestrian facility, an area of 0.75 m² is used as the buffer zone for each pedestrian. A walking pedestrian requires a certain amount of forward space. This forward space is a critical dimension, since it determines the speed of the trip and the number of pedestrians that are able to pass a point in a given time period. The forward space in the Fig 6 is categorized into a pacing zone and a sensory zone.

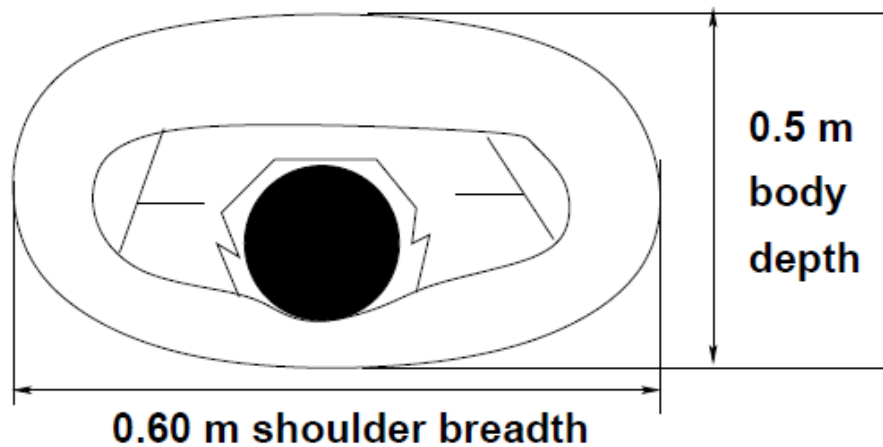


Figure 5: Pedestrian body ellipse.

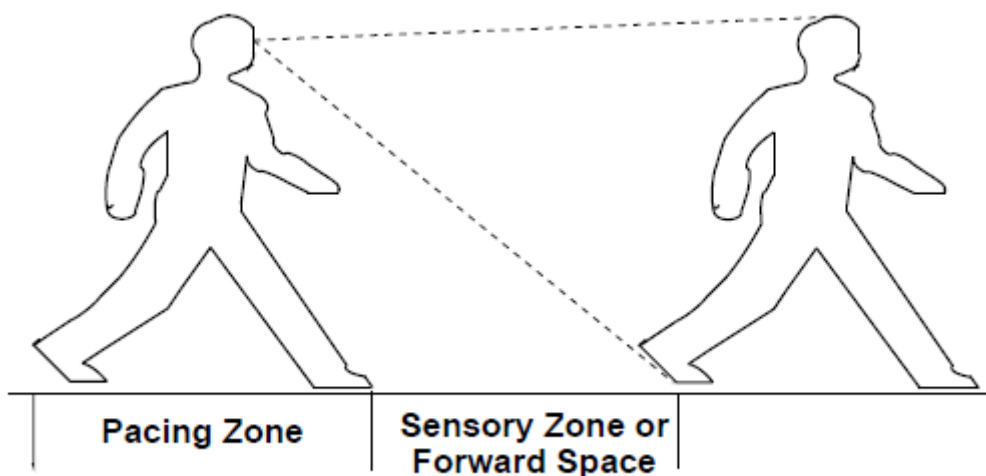


Figure 6: Pedestrian walking space requirement.

Pedestrian Walking Speed

Pedestrian walking speed is highly dependent on the proportion of elderly pedestrians (65 years old or more) in the walking population. If 0 to 20 per cent of pedestrians are elderly, the average walking speed is 1.2 m/s on walkways. If elderly people constitute more than 20 per cent of the total pedestrians, the average walking speed decreases to 1.0 m/s. In addition, a walkway upgrade of 10 per cent or more reduces walking speed by 0.1 m/s. On sidewalks, the free-flow speed of pedestrians is approximately 1.5 m/s. There are several other conditions that could reduce average pedestrian speed, such as a high percentage of slow-walking children in the pedestrian flow.

Pedestrian Start-Up Time and Capacity

A pedestrian start-up time of 3 sec. is a reasonable midrange value for evaluating crosswalks at traffic signals. A capacity of 75p/min/m or 4,500p/h/m is a reasonable value for a pedestrian facility if local data are not available. At capacity, a walking speed of 0.8 m/s is considered a reasonable value.

Level of Services

The HCM uses pedestrian space as primary measure of effectiveness, with mean speed and flow rate as secondary measures. Provision of adequate space for both moving and queuing pedestrian flow is necessary to ensure a good LOS. Alternatively LOS considered as pedestrian comfort, convenience, perception of safety and security. Alternative LOS measurements consider specific constraints to pedestrian flow such as stairway and wait time to cross roadways.

We are going to discuss LOS of walkways, LOS of queuing and LOS at signalized intersection below.

Pedestrian Walkway LOS

LOS A

Pedestrian Space > 5.6 m²/pm, Flow Rate = 16 p/min/m. At a walkway LOS A, pedestrians move in desired paths without altering their movements in response to other pedestrians. Walking speeds are freely selected, and conflicts between pedestrians are unlikely. It is shown in Fig. 7.

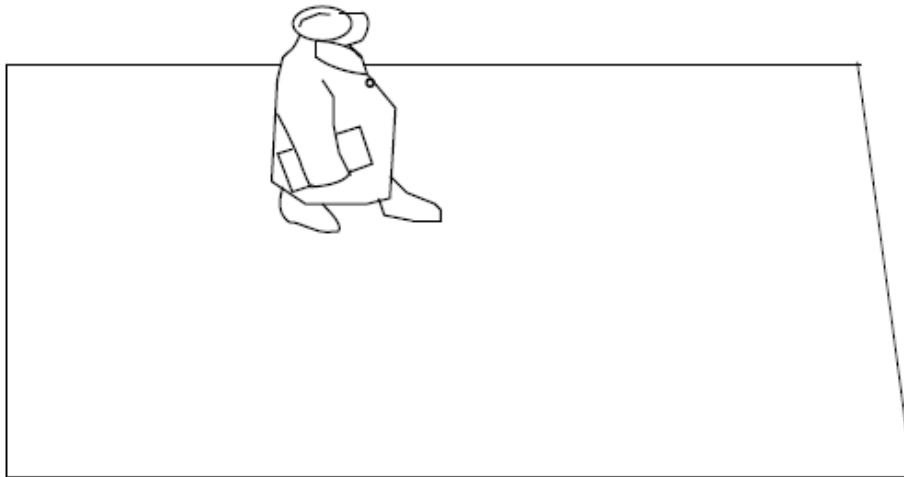


Figure 7: LOS A.

LOS B

Pedestrian Space > 3.7–5.6 m²/p Flow Rate > 16–23 p/min/m. At LOS B, there is sufficient area for pedestrians to select walking speeds freely, to bypass other pedestrians, and to avoid crossing conflicts. At this level, pedestrians begin to be aware of other pedestrians, and to respond to their presence when selecting a walking path. It is shown in Fig. 8.

LOS C

Pedestrian Space > 2.2–3.7 m²/p Flow Rate > 23–33 p/min/m. At LOS C, space is sufficient for normal walking speeds, and for bypassing other pedestrians in primarily unidirectional streams. Reverse-direction or crossing movements can cause minor conflicts, and speeds and flow rate are somewhat lower. It is shown in Fig. 9.

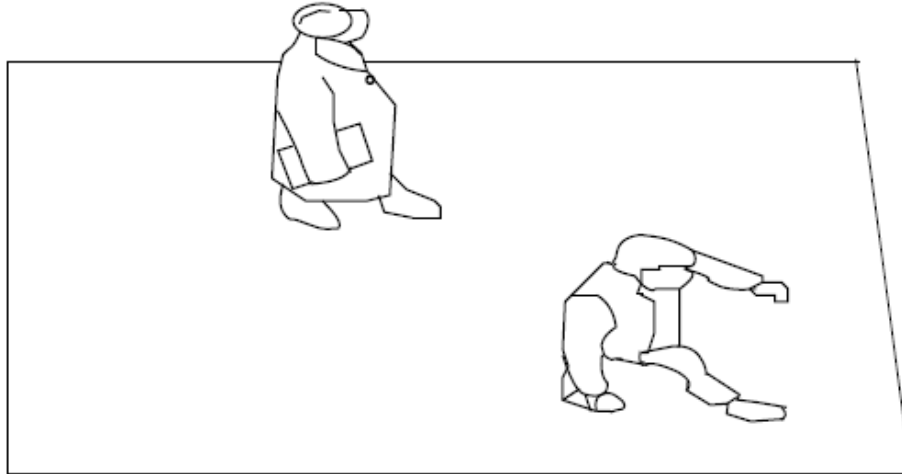


Figure 8: LOS B.

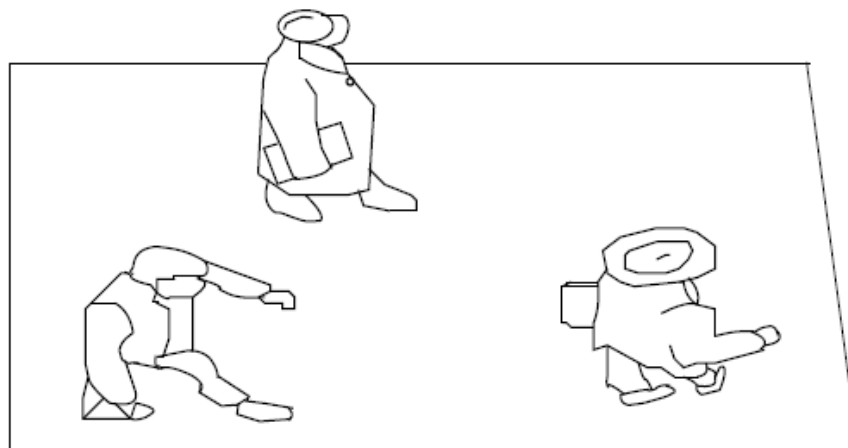


Figure 9: LOS C.

LOS D

Pedestrian Space > 1.4–2.2 m²/p Flow Rate > 33–49 p/min/m. At LOS D, freedom to select individual walking speed and to bypass other pedestrians is restricted. Crossing or reverse flow movements face a high probability of conflict, requiring frequent changes in speed and position.

The LOS provides reasonably fluid flow, but friction and interaction between pedestrians is likely. It is shown in Fig. 10.

LOS E

Pedestrian Space $> 0.75 - 1.4 \text{ m}^2/\text{p}$ Flow Rate $> 49 - 75 \text{ p}/\text{min}/\text{m}$. At LOS E, virtually all pedestrians restrict their normal walking speed, frequently adjusting their gait. At the lower range, forward movement is possible only by shuffling. Space is not sufficient for passing slower pedestrians. Cross- or reverse-flow movements are possible only with extreme difficulties.

Design volumes approach the limit of walkway capacity, with stoppages and interruptions to flow. It is shown in Fig. 11.

LOS F

Pedestrian Space $\leq 0.75 \text{ m}^2/\text{p}$ Flow Rate varies $\text{p}/\text{min}/\text{m}$. At LOS F, all walking speeds are severely restricted, and forward progress is made only by shuffling. There is frequent, unavoidable contact with other pedestrians. Cross- and reverse-flow movements are virtually impossible. Flow is sporadic and unstable. Space is more characteristic of queued pedestrians than of moving pedestrian streams. It is shown in Fig. 12.

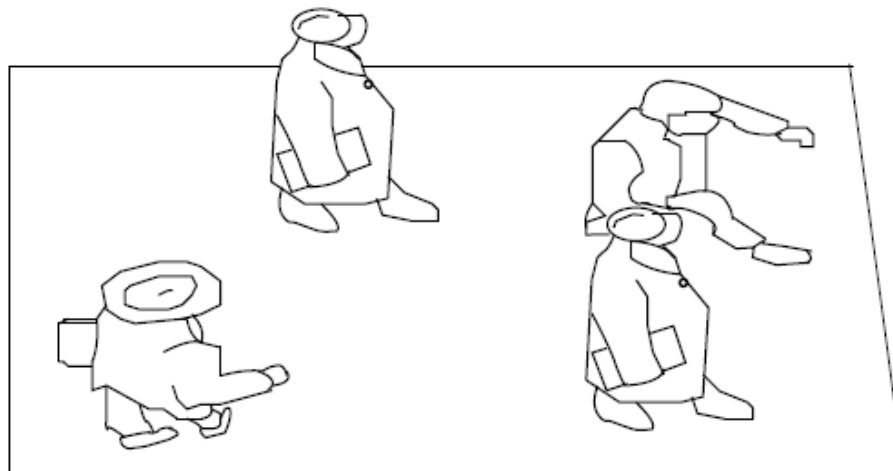


Figure 10: LOS D.

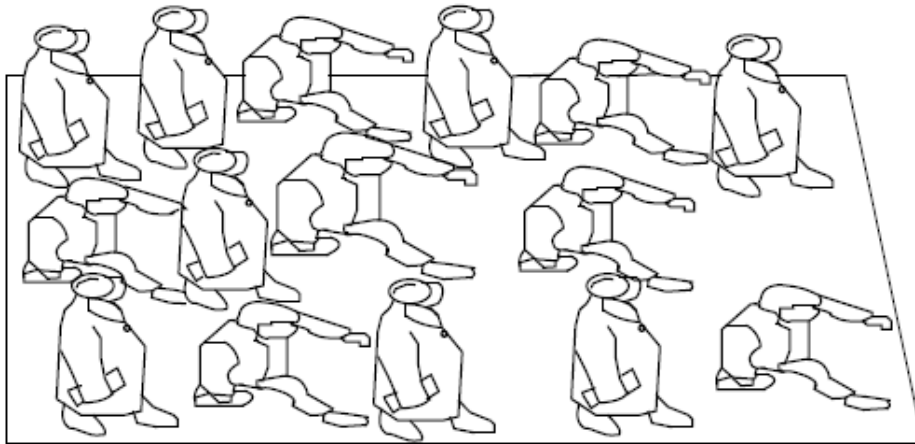


Figure 11: LOS E.

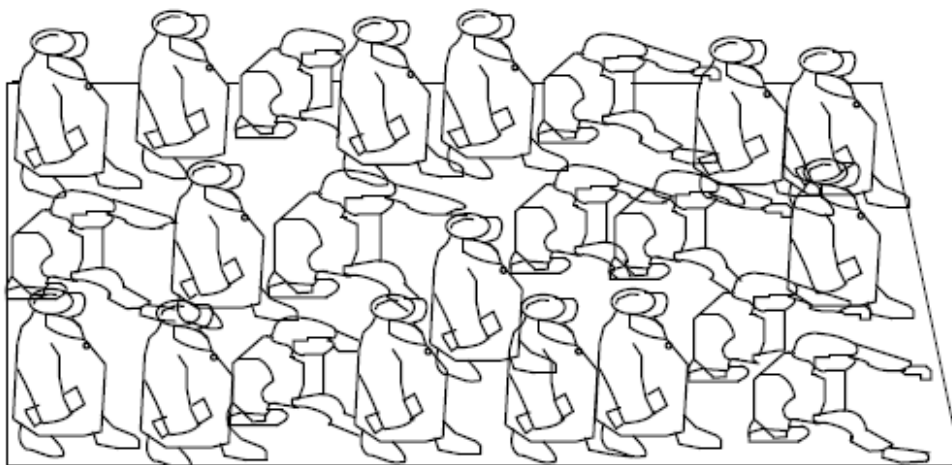


Figure 12: LOS F.

LOS	Pedestrian Delay(s/p)	Likelihood of Noncompliance
A	< 10	Low
B	≥ 10 – 20	
C	> 20 – 30	Moderate
D	> 30 – 40	
E	> 40 – 60	High
F	> 60	Very high

LOS at signalized intersection

The signalized intersection crossing is more complicated to analyze than a mid-block crossing, because it involves intersecting sidewalk flows, pedestrians crossing the street, and others queued waiting for the signal to change. The service measure is the average delay experienced by a pedestrian. Research indicates that the average delay of pedestrians at signalized intersection crossings is not constrained by capacity, even when pedestrian flow rates reach 5,000 p/h. The average delay per pedestrian for a crosswalk is given by Equation:

$$d_p = \frac{0.5(C - g)^2}{C}$$

Where, d_p = average pedestrian delay (s), g = effective green time (for pedestrians) (s), and C =cycle length (s).

Design principle of pedestrian facilities

In the design facilities we will discuss the design criteria of sidewalk, street corner, crosswalk, traffic island, overpass and underpass and other facilities like as pedestrian signals and signage.

Side walk

Sidewalks are pedestrian lanes that provide people with space to travel within the public right-of-way that is separated from roadway vehicles. They also provide places for children to walk, run, skate, ride bikes, and play. Sidewalks are associated with significant reductions in pedestrian collisions with motor vehicles.

- ❖ Width: The minimum clear width of a pedestrian access route shall be 1220 mm exclusive of the width of curb. It varies according to pedestrian flow rate and different LOS. It is shown in Table below.
- ❖ Cross slope: The cross slope of the pedestrian access route shall be maximum 1:48.

Table 2: Minimum pedestrian clear area (excluding sidewalk obstructions).

Pedestrian Flow rate (pedestrian/hour)	LOS A	LOS B	LOS C	LOS D	LOS E
< 600	1.5 m	1.2 m	1.2 m	1.2 m	1.2 m
600-1200	3.1 m	1.2 m	1.2 m	1.2 m	1.2 m
1200-2400	6.1m	1.8 m	1.5 m	1.2 m	1.2 m
2400-3600	Not recommended	2.8 m	1.8 m	1.5 m	1.2 m
3600-4800		3.7 m	2.5 m	1.8 m	1.2 m
4800-6000		4.6 m	3.1 m	2.1 m	1.2 m
6000-7200		5.5 m	3.7 m	2.5 m	1.5 m
7200-8400		6.1 m	4.3 m	3.1 m	1.8 m
8400-9600		7.1 m	4.9 m	3.4 m	2.1 m
9600-10800		8.1 m	5.5 m	3.7 m	2.5 m
10800-12000		8.9 m	6.1 m	4.3 m	2.5 m

- ❖ Surfaces: Surface should be firm, stable, slip resistance and prohibit openings & avoid service elements i.e. manholes etc.

A buffer zone of 1.2 to 1.8 m (4 to 6 ft) is desirable and should be provided to separate pedestrians from the street. The buffer zone will vary according to the street type. In downtown or commercial districts, a street furniture zone is usually appropriate.

Cross Walk

Marked crosswalks indicate optimal or preferred locations for pedestrians to cross and help designate right-of-way for motorists to yield to pedestrians. Crosswalks are often installed at signalized intersections and other selected locations.

1. It should be located at all open legs of signalized intersection.
2. It should be perpendicular to roadway.
3. The parallel line should be 0.2-0.6 m in width and min. length 1.8 m (standard 3m).
4. Marking may be of different type to increase visibility like as solid, standard, continental, dashed, zebra, ladder. It is shown in Fig.13.

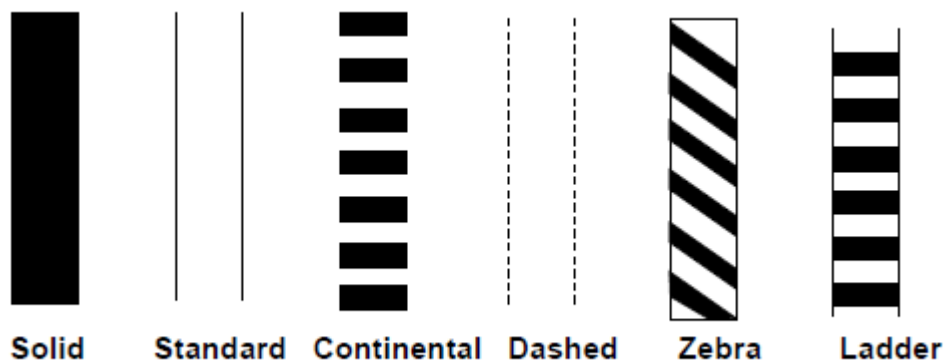


Figure 13: Cross walk marking pattern.

Traffic Islands

Traffic islands to reduce the length of the crossing should be considered for the safety of all road users. It is used to permit safe crossing when insufficient gap in two directions traffic & helps elderly, children and disabled.

- ❖ It works best when refuge area median is greater than cross walk width or 3.6 m, have a surface area of at least 4.6 sq.m, are free of obstructions, have adequate drainage, and provide a flat, street level surface to provide accessibility to people with disabilities.
- ❖ The Refuge area width should be at least 1.2 m wide and depend upon traffic speed. It should be 1.5m wide on streets with speeds between 40-48 kmph, 1.8 m wide(48-56kmph), and 2.4 m (56-72 kmph).

Pedestrian Overpass and Underpass

Pedestrian facilities at-grade and as directly as possible are always preferred. However, where grade separation is indicated, paths that are attractive, convenient and direct can become well-used and highly valued parts of a city's pedestrian infrastructure.

- ❖ These are expensive method but eliminate all or most conflicts. These may be warranted for critical locations such as schools factory gates, sports arenas, and major downtown intersections (specially in conjunction with transit stations).
- ❖ Overpasses are less expensive than underpass. However , vertical rise and fall to be negotiated by pedestrians is usually greater for an overpass, and it may be aesthetically inferior.
- ❖ Minimum width is required 1.22 m, although 1.83 is preferred.
- ❖ Ramps slopes not greater than 1:12 (8.33%) are preferable to flights of stairs to accommodate wheelchair, strollers, and bicycles and to comply with ADA.



Figure 14: Ladder pattern at intersection.

Street Corner

Available Time-Space: The total time-space available for circulation and queuing in the intersection corner during an analysis period is the product of the net corner area and the length of the analysis period. For street corners, the analysis period is one signal cycle and therefore

is equal to the cycle length. The following equation is used to compute time-space available at an intersection corner. Intersection Corner Geometry is shown in Fig. 15.

$$TS = C(W_a * W_b - 0.215R^2)$$

Where,

TS =available time-space (m²-s),

W_a = effective width of Sidewalk a (m),

W_b = effective width of Sidewalk b (m), R = radius of corner curb (m), and

C = cycle length (s).

Pedestrian signals

Pedestrian signals are designed basically considering minimum time gap required for crossing the pedestrians. This minimum time gap can be calculated by using following gap equation.

$$Gs = \frac{W}{S_{ped}} + tc(N - 1) + ts$$

Where:

Gs=min time gap in sec,

W= width of crossing section,

t_s= start-up time,

t_c= consecutive time between two pedestrian,

N=no of rows, and

S_{ped} =pedestrian speed.

Traffic sign

There are many sign used for pedestrian facilities like as in-pavement flashers, overhead signs, animated pedestrian indications and school zone symbol. These are shown below:

- In-Pavement Flashers (Fig. 16)
- Overhead Signs (Fig. 17)
- Animated Pedestrian Indications (Fig.18)
- School Zone Symbol (Fig. 19)



Figure 16: In-Pavement Raised Markers with Amber LED Strobe Lighting and LED Signs.

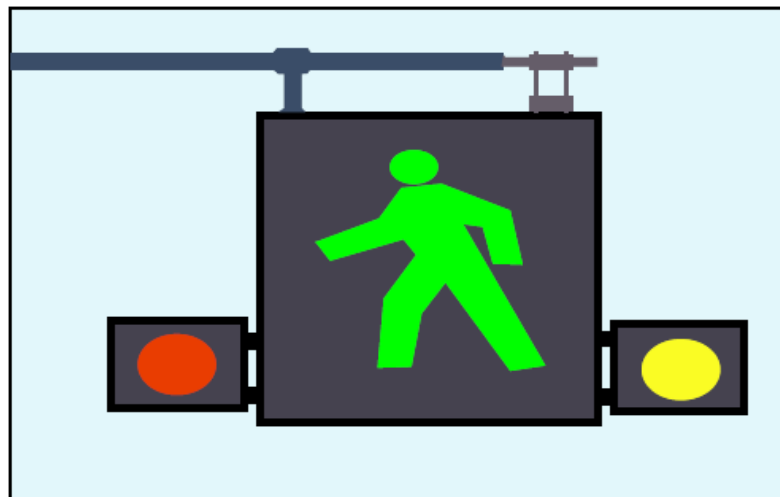


Figure17: Overhead Pedestrian Signs.

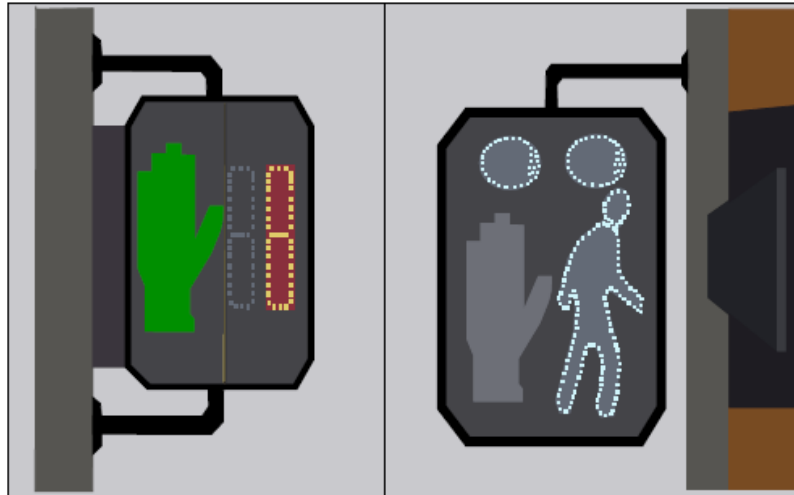


Figure 18: Animated Pedestrian Signals.



Figure19: School Zone Symbol